
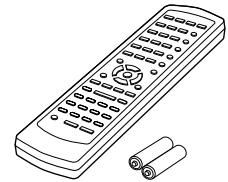


HT-R410

Basic Operation Guide

1 Check that the following accessories are supplied with the HT-R410.

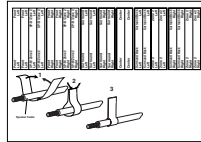


- ☐ AM loop antenna × 1
- ☐ FM indoor antenna × 1

- ☐ Speaker cable label × 1
- ☐ Instruction manual × 1

- ☐ Remote controller × 1
- ☐ Batteries (AA or R6) × 2


2 Insert the batteries

1 Detach the battery cover.

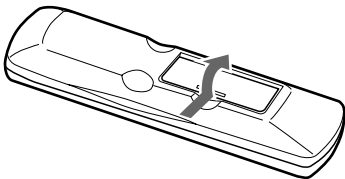


2 Insert the two size AA/R6 batteries.

Be sure to match the + and – ends of the batteries with the diagram inside the battery compartment.

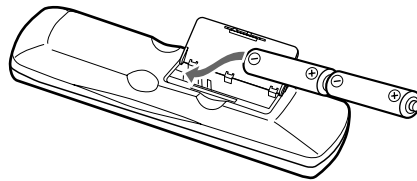


3 Attach the battery cover.

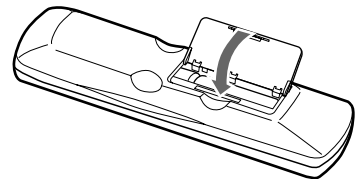


3 Connect the supplied FM and AM indoor antennas.


Rotate the outer frame of the antenna.

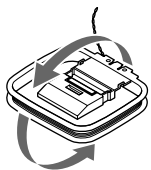

Insert into the hole.

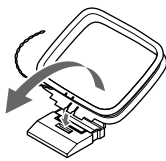


Extend the antenna cord.

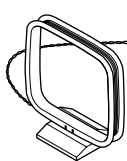


Press and hold up the lever.



Insert the end of the cord.

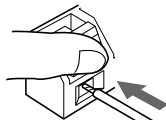


Release the lever to secure the connection.

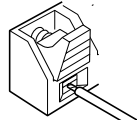

AM indoor antenna




FM indoor antenna

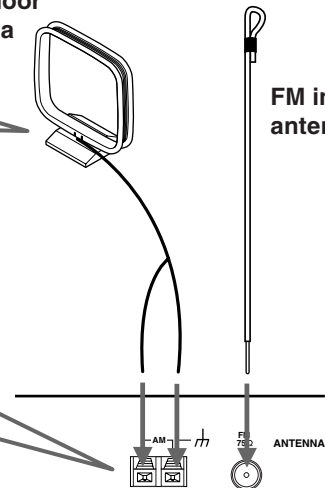

1 Strip away the insulation from the end of the cord.




2 Fully insert the stripped end of the cord.

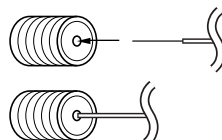

4 Connect the speakers.

If all of the speakers shown below are not available, connect at least the front right and left speakers. This makes it possible to enjoy the stereo audio.

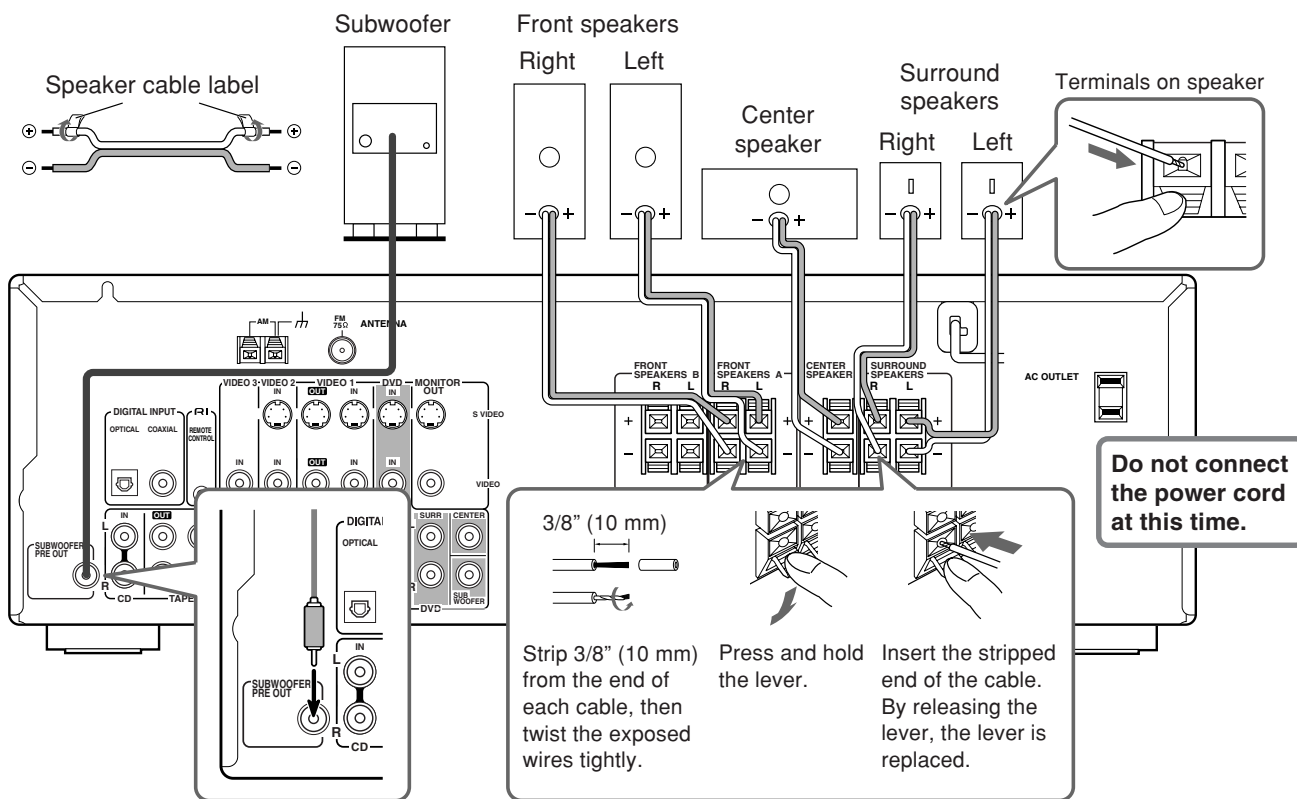

5 Before connecting to other devices.

Basic information about video terminals

There are 3 basic types of video signal terminals: video (composite), S-Video, and component video. The type of terminals available may vary for each component. Please check the terminals available on your components and prepare the appropriate cables before making connections. **With this unit, the video signal input and output must use the same type of terminal.** For example, when the DVD player has both the S-Video and video terminals and the TV has only the video terminal, the two units should be connected using the video terminals.

The video terminal (composite video) uses a standard video jack found in many video components such as TV and VCR. The connection to this terminal uses an RCA type connection cable equipped with RCA type pin plugs.

The S-Video terminal can transmit video with higher quality than the composite video terminal. The connection to this terminal uses a S-Video cable.

In addition, although not used in this unit, **the component video terminals** are used in some TV featuring high video quality. These terminals output the video luminance and chrominance signals separately for faithful reproduction of original colors.


Preparatory knowledge on video terminals

Audio signal terminals include those for digital audio and those for analog audio.

The digital audio terminals are compatible with multiple channels and can transmit audio with higher quality than analog audio terminals. The digital audio terminals include Optical and Coaxial terminals but their audio quality is identical. The Digital Optical terminals should be connected using an optical fiber cable while the Digital Coaxial terminals should be connected using a coaxial cable (RCA type).


The analog terminals (L/R) should be connected using an audio connection cable (RCA type).

The analog multichannel terminals are found in DVD players with DVD audio compatibility. **This unit uses an analog multichannel terminal as the DVD terminal.** The connection of this terminal should use an audio connection cable (RCA type).

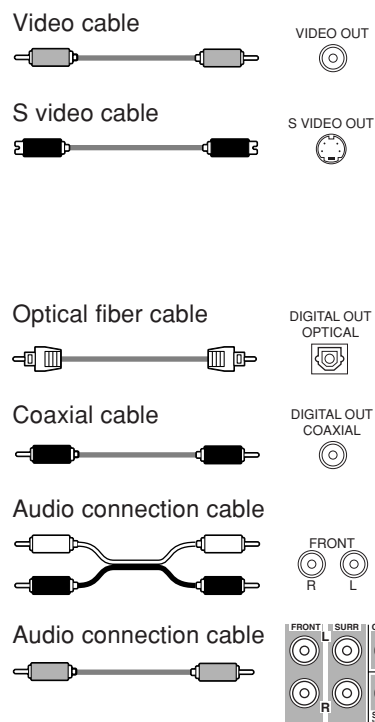


Note


Either the S-Video or Video terminal can be used for connection. However, the type of the terminals used in connection between the DVD player and this unit should be identical to that used in connection between the TV and this unit.

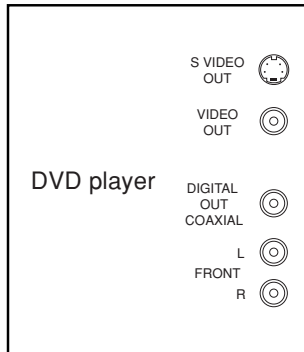

Note

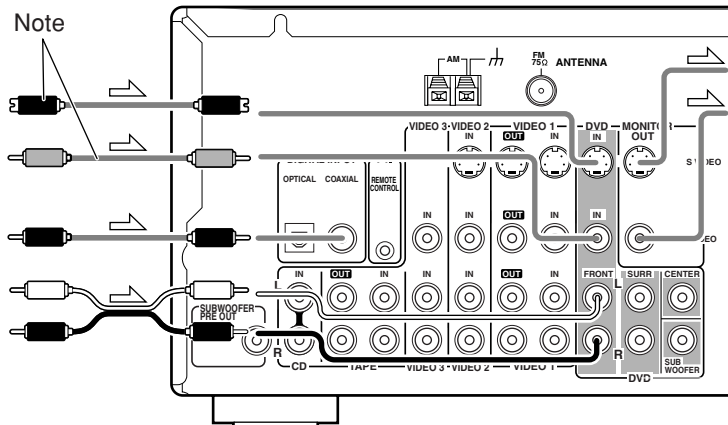

Note

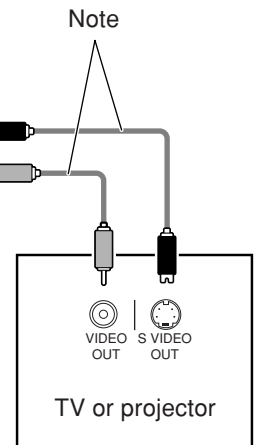


↗ :Signal flow

Enjoying DVD

1. Connect the monitor TV and the DVD player.

Here, only the typical connections are shown. For details, see pages 10 and 11 of the main manual.

 2. Connect the power cord to a wall outlet.



The STANDBY indicator lights up.

3. Turn on the power.

The STANDBY indicator turns off, and the display area lights up. Make sure that the power switch on the DVD player is also turned ON.

4. Select the speaker system(s) to be used.

5. Set the Input Select to DVD.

6. If you connect the digital output jack of the DVD player to the COAXIAL jack on the HT-R410 in step 1, proceed to step 7. If you connect to the OPTICAL jack on the HT-R410, perform the following settings.

- 1 Press the DIGITAL INPUT button on the HT-R410.
The default DVD setting (Coaxial) appears.
- 2 Press the DIGITAL INPUT button repeatedly to select "Optical".

7. Play a DVD.

The video appears on the monitor TV.

In the following cases, you can control an Onkyo DVD player using the remote controller of this unit.

- When an Onkyo DVD player is **R1**-connected.
(See page 16 of the main manual for details.)
- When the manufacturer's code is entered.
(See pages 33-34 of the main manual for details.)

How to play a DVD using the remote controller:

- 1 Press the CD/DVD button.
- 2 Press the ► button.


8. Adjust the volume.

9. Select the listening mode.

The selectable listening mode varies depending on the source. (See pages 28-29 of the main manual for details.)

10. Select the audio mode.

You can compare the analog and digital sound. (See page 26 of the main manual for details.)

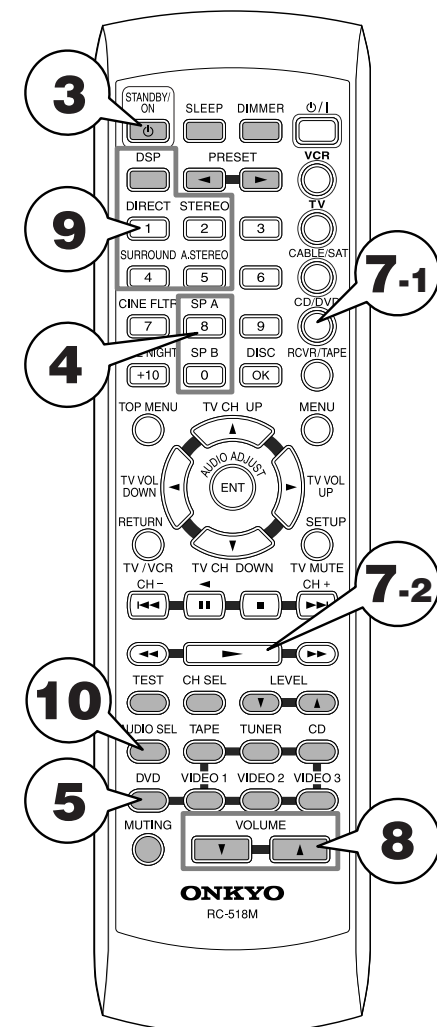

To enjoy multi channel input ➡ See page 27 of the main manual.



To retain better sound effect, we recommend to make the following settings.

"Connecting speakers" ➡ See pages 12-13 of the main manual.

"Speaker Setup" ➡ See pages 18-20 of the main manual.

Enjoying CD

1. Connect the CD player.

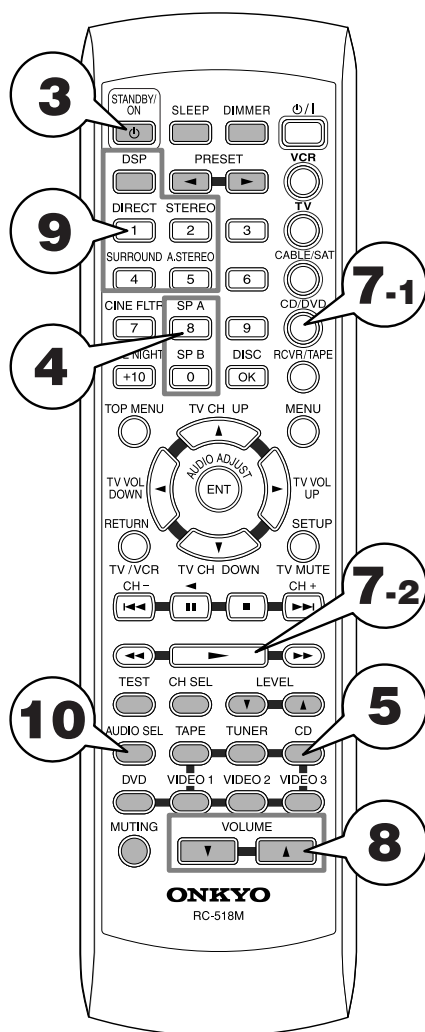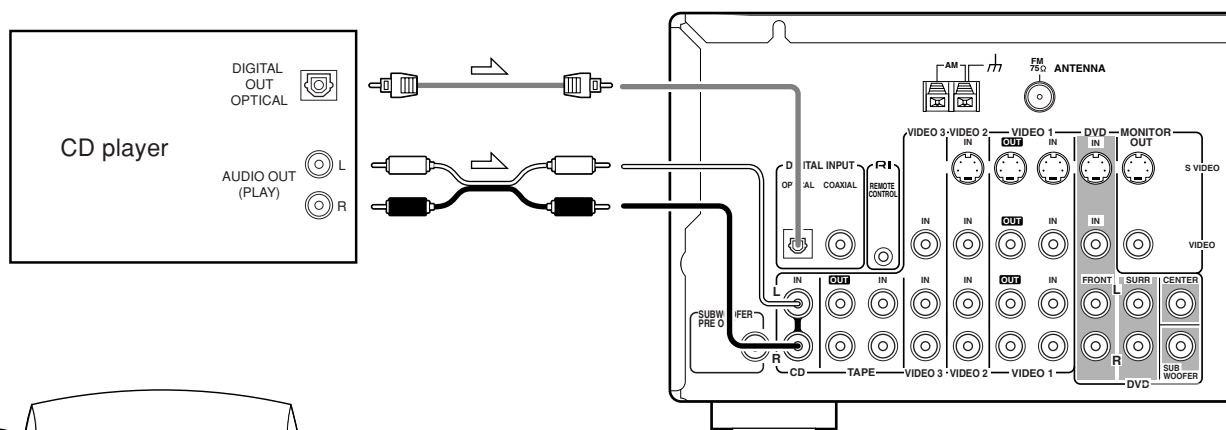

2. Connect the power cord to a wall outlet.

3. Turn on the power.

The STANDBY indicator turns off, and the display area lights up. Make sure that the power switch on the CD player is also turned ON.

4. Select the speaker system(s) to be used.

5. Set the Input Select to CD.

6. If you connect the digital output jack of the CD player to the OPTICAL jack on the HT-R410 in step 1, proceed to step 7. If you connect to the COAXIAL jack on the HT-R410, perform the following settings.

- 1 Press the DIGITAL INPUT button on the HT-R410.
The default CD setting (Optical) appears.
- 2 Press the DIGITAL INPUT button repeatedly to select "Coaxial".

7. Play a CD.

When an Onkyo CD player is **RI**-connected, you can control an Onkyo CD player using the remote controller of this unit.

You need to enter the manufacturer's code "300". (See pages 33–34 of the main manual for details.)

How to play a CD using the remote controller:

- 1 Press the CD/DVD button.
- 2 Press the ► button.

8. Adjust the volume.

9. Select the listening mode.

The selectable listening mode varies depending on the source. (See pages 28–29 of the main manual for details).

10. Select the audio mode.

You can compare the analog and digital sound. (See page 26 of the main manual for details).

If no sound is heard.

The power turns on but no sound is heard.

The MUTING indicator flashes.

The headphones are connected.

The connections are incorrect.

The digital input setting is incorrect.

The power does not turn on.

The connections are incorrect.

The external noise has affected the internal .

⇒ Press the MUTING button on the remote controller to turn off the MUTING indicator

⇒ Disconnect the headphones.

⇒ Make sure that all connections are made correctly.

⇒ Make sure that correct input source is set in step 6 above.

⇒ Make sure the power cord is connected correctly.

⇒ Unplug the power cord from the AC outlet to turn off the unit and then plug it again after about five seconds.